



Setup Guide

Everything you need to get going with your new Xsight™ Uno remote control:

- >> *Out of the Box*
- >> *Installing the EZ-RC™ Remote Control Setup Wizard*
- >> *Creating Activities*
- >> *Creating Favorites*
- >> *Troubleshooting*

Out of the Box

Quick Look:

- > Unpack
- > Install batteries
- > Tips for using the remote screen
- > Remote setup
- > On-remote setup of TVs, A/V components, and other devices

What you'll be doing by the end of this section:

Controlling your home theater devices


1 Unpack

The first step is to make sure you've got the following parts in your package:


- The *Xsight™ Uno* remote
- 4 AAA batteries
- 1 USB adapter
- CD-ROM
- This setup guide

2 Install batteries

The next step is to install the *Xsight™ Uno*'s batteries.

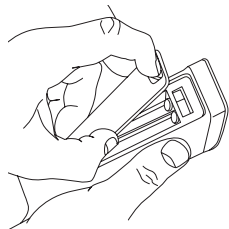

First, remove the battery door from the back of the *Xsight™ Uno*. Press up on the latch to release the door.

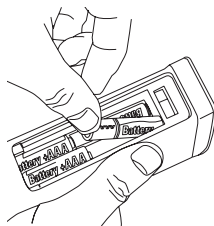

Then insert the batteries (provided in this package), matching them to the (+) and (-) marks inside the battery case.

Finally, replace the battery door.




Need help setting up this remote?


Please call our help line toll-free at 1-800-276-0509.


Tips for using the remote screen

To select an item on the remote screen, all you have to do is highlight and select.

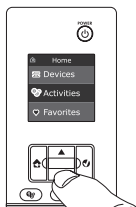


To highlight an item: Use the up and down arrow keys beneath the screen.

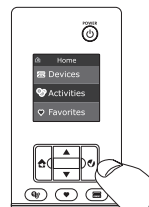


To select an item: Press the  key.


Many remote menus have more items than will fit on a single screen. If you don't see the item you want on a menu screen, look for the arrow in the lower-right corner of the screen...that means there are more items in this menu. To access these items, just keep pressing the down arrow when you get to the last item showing.

The top of the remote also offers **Shortcut keys** to give you one-touch access to some of the remote's advanced functions:

 **(Home/Back)** goes back one screen in the menus. Holding this key down for three seconds takes the remote to the Home Screen.

 **(Activities)** accesses the Activities screen directly.

 **(Favorites)** accesses the Favorites screen directly.


 **(Devices)** accesses the Devices screen directly.

3 Remote Setup

Once you've installed the remote's batteries, you're ready to start setting it up. The *Xsight™ Uno* has screens that guide you through the initial setup process.



Set Language


Use the arrow keys below the screen to highlight the language you want the remote's menus to appear in (probably **English**). Press the  key to select it.




Tutorial

The next few screens take you through a quick tutorial to get you familiar with the LCD screen. Use the arrow keys below the screen to go through the pages.

Screens in the wrong language?

You can change the setting by pressing the  (Home/Back) key to go back one or more screens in the setup routine.


Make a mistake?

You can change the setting by pressing the  (Home/Back) key to go back one or more screens in the setup routine.

4 On-Remote Device Setup

The *Xsight™ Uno* lets you set up your devices (up to 6) in seconds, right on the remote, with a built-in library of codes for the most popular models of the most common home theater devices: DVD players, plasma and LCD HDTVs, and much more.

Note: If you quit setup before reaching the Add Device screen, you can access device setup through the Settings menu on the remote. In the Home screen, choose **Settings** (it's on the second page of the Home screen—use the arrow keys below the screen to access it). Then select **Device Setup** and **Add Device**, and follow the instructions.

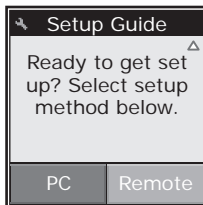

After the tutorial, select "Remote"

The remote asks if you want to set up devices on your remote or using your PC. To use the on-remote setup, press to select **Remote**.



To begin setting up your first device, press to select **Add Device** on the screen that follows.

Don't see your device?

Try the EZ-RC™ Remote Control Setup Wizard! On-remote device setup supports the most popular models of the most popular brands. The EZ-RC™ Remote Control Setup Wizard handles everything else! So, if you don't see your device listed in the on-remote device setup, you can set it up using your PC and the EZ-RC™ Remote Control Setup Wizard. See the sections that follow for information.




Choose the kind of device you want to set up.

Use the arrow keys to go through the pages of devices. When you see the kind of device you want to set up (TV, DVD, etc.), highlight it and press to select it.

Don't see your brand?



Try the EZ-RC™ Remote Control Setup Wizard! On-remote device setup supports the most popular models of the most popular brands. The EZ-RC™ Remote Control Setup Wizard handles everything else! So, if you don't see your brand listed in the on-remote device setup, you can set it up using your PC and the EZ-RC™ Remote Control Setup Wizard. See the sections that follow for information.

To go back a screen:


Press the  (Home/Back) key to go back one or more screens in the setup routine.

Tips for testing codes

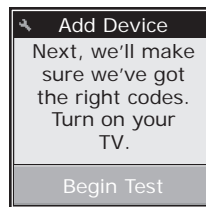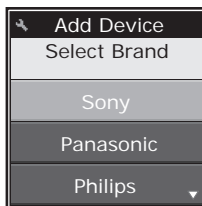


- Always point the remote directly at the device you're trying to control.
- It may take a few seconds for your device to respond to a command (especially on or off). Be patient between presses—give your device a few seconds to respond.
- Some brands of devices do not use a POWER key to turn the device on or off. Instead they use separate POWER ON and POWER OFF keys. Check your devices' original remotes to see if any of them have these separate power keys. If they do, use other keys (volume, channel, or number keys) to test codes in this step.




Choose your device's brand.


Use the arrow keys below the screen to go through the pages of brands for this device. When you see your brand, highlight it and press  to select it.

Enter a name for your device.

To accept the default name for the device (for example, "TV" for a TV, "DVD" for a DVD player, etc.), press  to select continue. To change the name, press  to clear the text. Then use the number keys on the remote like the number keys on your mobile phone to "text" in a new name for the device. Press  to enter the name.

Test your codes.

Now the remote will take you through steps to test which of the codes in the remote's library is the best one to use with your device. Turn on your device manually, point the remote toward it, and press  to select **Begin Test**.

First, test the  (Power) button on the remote.



If your device turns off, try several other keys on your remote to make sure this code gives you all the functionality you want for this device. For example, if you're testing a code for your DVD



Can't find a code that works your device (or one that does everything you want it to do)?

Use the EZ-RC™ Remote Control Setup Wizard! The setup wizard lets you enter your device's model number to find exactly the right code for your device.

If you find a code that does most of what you want to do with a device, you can learn additional keys from your original remote through the remote's Settings menu (see the remote's user manual for instructions).

How to see what you've set up so far

If you're not sure what devices you've already added to the remote, press the  (Devices) shortcut key on the remote at the beginning of device setup (in the "What is it?" or "Select brand" screens). Use the arrow keys below the screen to browse through the devices you've already programmed. Then press the  (Home/Back) key to go to the Home screen, use the arrow keys below the screen to see the second page, select **Settings**, then **Device Setup**, and finally **Add Device** to set up more devices.

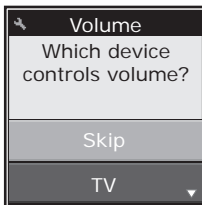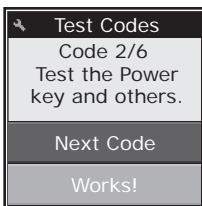

player, you definitely want the transport keys to work (play, stop, fast forward, etc.). So you should test at least these keys for a DVD player.



If the other keys on the remote work for your device, select **Works!** If the other keys don't work, select **Next Code** to try the next code in the library.

More devices?

Once you've found a code that works for your device, the remote asks if you want to add another device. Select **Yes** to add another device (up to a maximum of 6 devices). Or select **No** if you're done for now.

Set Master Volume control




If you've set up the remote to control more than one device, the remote asks if there's a single device that controls volume for your entire system (like an audio receiver).

If there is, use the arrow keys below the screen to highlight that device in the list, then press . If not, highlight *Skip* and press .

If you sometimes use other devices to change volume, answer **No** in these screens—you'll have a chance to set up master volume for specific activities (like when you're watching a movie) later.

Want to start over?

You can reset the remote to its settings when you first unpacked it. This removes all information about your devices, activities, and other setup parameters.

1. Press the  (Home/Back) key on the remote to go to the Home screen.
2. Use the down arrow key to access the second page of the Home screen. Highlight Settings and press  to select it.
3. Use the arrow keys to go through the pages of the Settings menu until you see the Reset option. Select Reset. The remote will display the Reset Screen.
4. Press the 9 - 8 - 1 number keys.
5. Press  to select Factory Reset.
6. Select Yes in the confirmation screen to delete all device programming, activities, profiles and favorites, and setup information (the remote's initial setup program will start). Select No to cancel the reset and retain all settings.

Using the remote


Now you're ready to start using the *Xsight™ Uno* with your home entertainment devices.

The **home screen** of the *Xsight™ Uno* is your gateway to the remote's full functionality. The home screen has the following options:

- **Favorites**
- **Activities**
- **Devices**
- **Settings** (on the second page of the screen—use the arrow keys below the screen to access this option)


The **arrow keys** highlight an item from the on-screen menu.

The  key selects green-highlighted items.

The  key takes you back one screen. (Press and hold to return to the Home screen.) It also selects red-highlighted items when these are available.

The **shortcut keys** access the home screen options directly.

The **hard keys** on the bottom of the remote work much like the keys on your original remotes.

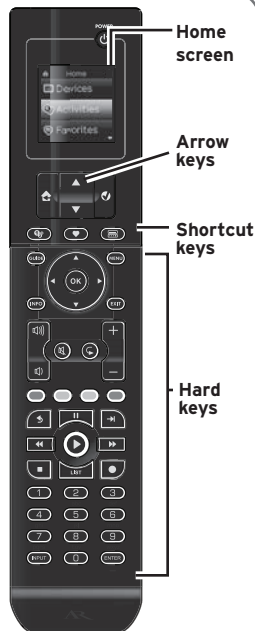

Installing the EZ-RC™ Remote Control Setup Wizard

Quick Look:

- > System requirements
- > Install the EZ-RC™ Remote Control Setup Wizard
- > Launch the EZ-RC™ Remote Control Setup Wizard
- > Sign in and connect your remote

What you'll be doing by the end of this section:

Using the EZ-RC™ Remote Control Setup Wizard to set up your remote's advanced features.

1 Make sure your PC satisfies system requirements

Minimum hardware requirements

- USB 2.0 port
- CD-Rom drive
- Internet connection

Minimum software requirements


- Windows XP, Windows Vista, or Windows 7 (does not support Windows 2000)
- Internet Explorer 6.0 or later (does not support Firefox or Safari)

IMPORTANT NOTE FOR WINDOWS XP USERS:

You must have Service Pack 3 and .Net 3.5

To find out which service pack version you have:

1. Right click on **My Computer** on your PC desktop.
2. Choose **Properties** from the drop-down menu.
3. In the **General** tab, the **Service Pack** is listed under **System**.

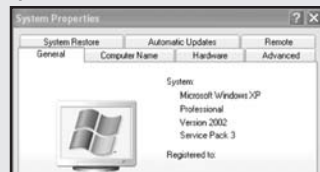

To update to SP3:

1. Insert the CD that came with the remote. The CD goes automatically to Microsoft update site if you have a working internet connection.
2. At the Microsoft website, click **Express** to begin the updating process. The Microsoft site checks your computer (this takes about 5-10 minutes).
3. The Microsoft site will tell you which updates you need to install. Follow the Microsoft site and installation wizard instructions to download and install updates.


How long will this take? (depending on connection speed)

If you have SP1: 1 hour to update to SP2; an additional 30 mins for SP3

If you have SP2: 30 mins for SP3

4. Close all internet browser windows and continue with EZ-RC install.

2 Install the EZ-RC™ Remote Control Setup Wizard

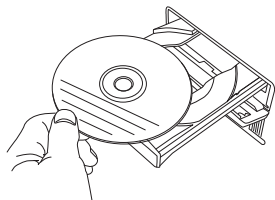

Insert the **CD-ROM** that came with your *Xsight™ Uno* into your PC. The EZ-RC™ installation program should start automatically after a minute or so.

Follow the **CD-ROM's on-screen instructions** to install the EZ-RC™ Remote Control Setup Wizard.

What if my CD doesn't start installation automatically?



1. Open the CD and double-click on the icon shown here.
2. If you have Windows XP and need Service Pack 3, see the Important Note for Windows XP users on the previous page (Vista users do not need this kind of update).


3 Launch the EZ-RC™ Remote Control Setup Wizard.



Double-click on the EZ-RC™ Remote Control Setup Wizard icon on your PC desktop.

Note: Proxy servers, like those used in many business networks, may affect the performance of the EZ-RC™ Remote Control Setup Wizard. For best results, use the EZ-RC™ Remote Control Setup Wizard with a direct internet connection (for example, your home connection).

4 Sign into the EZ-RC™ Remote Control Setup Wizard.

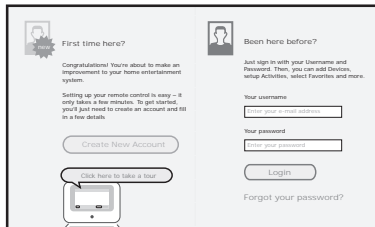


The first time you access the EZ-RC™ Remote Control Setup Wizard, you will need to register so that you can save your remote's settings. Click **Create New Account**.

Once you've created your account, you can use your username and password to sign in.


Need help setting up this remote?

Please call our help line toll-free at 1-800-276-0509.

5 Connect your remote when prompted

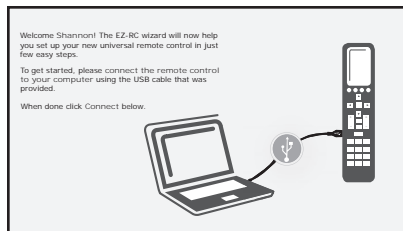

 Use the USB cable that came with your remote to connect it to a USB port on your computer.




How do I know if the remote's connected?

Look for the green arrow icon in your PC's status bar.



If you see a progress bar in the corner of the screen...

 It means your remote's firmware is being updated.




Don't disconnect the remote! The *Xsight™ Uno* is constantly being updated and improved, to get the latest codes and provide the most advanced functionality available.

If you see this error message...

You need to change your ActiveX settings in Internet Explorer for the EZ-RC™ Remote Control Setup Wizard to work.

To change settings ActiveX settings:

 
1. Click OK in the "Missing necessary software..." dialog box.
2. Locate the yellow warning bar just above the AR remote control setup wizard page (shown below).



3. Click where it says "click here" on the yellow warning bar to change the ActiveX setting.
4. Click the Connect button again at the bottom of the screen.

Why ActiveX controls are necessary


The EZ-RC™ Remote Control Setup Wizard uses ActiveX controls to give you an enhanced user interface, with straightforward access to the remote's advanced features and seamless integration with the remote itself.

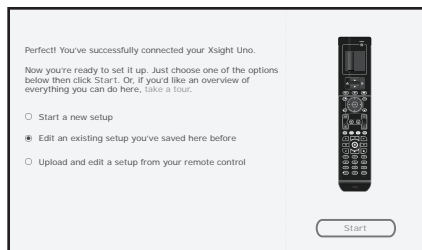

In the first setup screen after you've connected your remote, check the **Upload and edit a setup from your remote** option.



Then confirm that you want to proceed. This tells the EZ-RC™ Remote Control Setup Wizard that you want to save the settings you created during the on-remote setup.

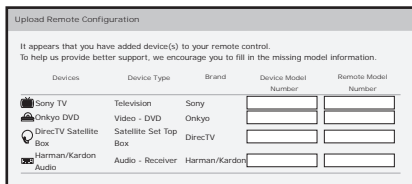

If you're uploading new device information (like the new devices you set up in the on-remote setup), the final screen before the EZ-RC™ Remote Control Setup Wizard Main Menu asks for the model numbers of these devices.

For the best experience with your *Xsight™ Uno* remote, we recommend you add this information. This will allow the setup wizard to give you the full functionality for your exact models.

Need help setting up this remote?

Please call our help line toll-free at 1-800-276-0509.

Important: Disconnect the remote from your PC when you're finished!

Leaving the *Xsight™ Uno* connected to your PC will drain the remote's battery.

Activities

Quick Look:

- > Set up the “Hello” activity (all on)
- > Set up the “Good Night” activity (all off)
- > Set up a “Watch Movie” activity
- > Set up a “Watch Satellite/Cable” activity

What you'll be doing by the end of this section:

Controlling your entire home entertainment system with one touch.

Set up your first activities

Activities give you one-touch control over your entire home theater...watch movies, your favorite TV shows, listen to music...up to 6 different customized routines, all with the touch of a button. This chapter gets you started. This is how it works:

- a “Hello” activity turns on all your home theater devices automatically when you're ready to start enjoying them
- customized activities to Watch Movies, Watch Satellite or Cable, Listen to Music, etc. let you switch seamlessly between your favorite TV shows and DVDs
- when you're finished enjoying your home theater, a “Good Night” activity turns everything off for you




Setting up the “Hello” activity (all on)

The “Hello” activity is a very important first step to get the most from activities on your *Xsight™ Uno*. Different devices require different amounts of time to warm up before they can be used, which can interfere with the functioning of multi-step activities like “Watch Movie,” which you'll set up later in this section. The “Hello” activity makes sure everything is on and ready for action when you want to use it.


Using Quick Power

The *Xsight™ Uno* offers another option for quickly turning multiple devices on or off: Quick Power. This feature puts the power commands for all your devices on a single screen, where you can manage your home entertainment system with a single touch.


To use Quick Power:

1. Press the  shortcut key. Then press the  key to select Quick Power.
2. Use the arrow keys to highlight the device you want to turn on or off. Press the  key to turn that device on or off.

1 Add a “Hello” activity.

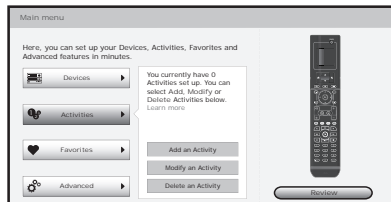

In the main menu, click **Activities** and select **Add an activity** from the submenu.

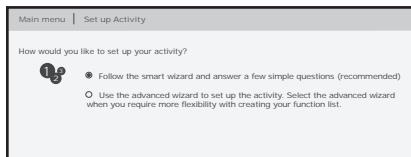


Choose Smart Wizard

Then click the **Next** button to continue.

A screen appears showing you the steps you'll go through to set up the activity using the Smart Wizard. Click the **Next** button at the bottom of the screen to continue.


Why Smart Wizard?

There are two ways to set up Activities: the Smart Wizard and the Advanced Wizard. The Smart Wizard is much easier for simple activities, like turning everything on or off. The Advanced Wizard is better for more complicated tasks.

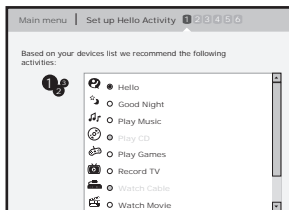

Choose the activity you want to set up (Hello)


The next screen shows you a list of activities you can set up. Choose **Hello**. Click the **Next** button at the bottom of the screen to continue.

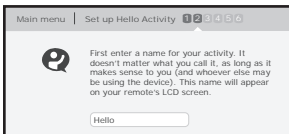

Name the activity

The next screen lets you customize the name of this activity. Type in a new name for this activity or leave it as “Hello”. Then click the **Next** button at the bottom of the screen to continue.

2 Configure the “Hello” activity for your devices.

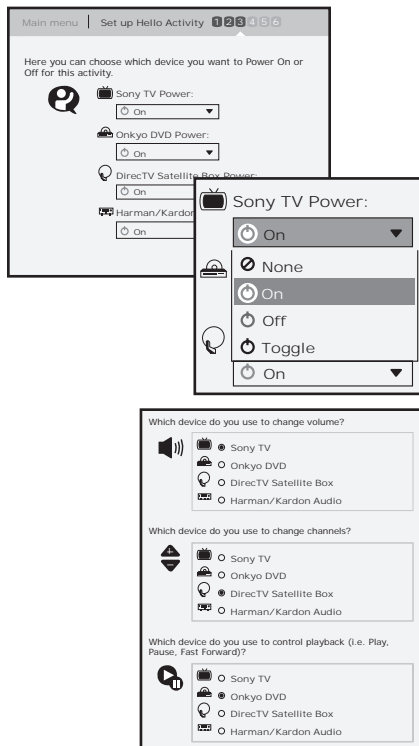

Set the power on commands

Once you've given the “Hello” activity the name you want (or left it as “Hello”), the next Wizard screen lets you set how each of your devices are powered on.

Use the pull-down menu for each device to set that device's power-on command. The options are:

None Use this option if you want to leave a device out of the “Hello” activity (for example, if the device is in another room).

On Use this option if the remote that originally came with this device has separate ON and OFF keys (not a single POWER key).

Off Since this option turns your devices off, you won't use it in this activity.

Toggle Use this option if the remote that originally came with this device has a single POWER (or ON/OFF) key.

Once you've set the power-on command for each of your devices click the **Next** button at the bottom of the screen to continue.

Set volume/channel/playback controls


The next setup screen for the “Hello” activity lets you set which devices you use to change volume and channels, and control playback in your home entertainment system.

Once you've set the devices you want to control volume, channel selection, and playback, click the **Next** button at the bottom of the screen to continue.

After you click **Next**, the EZ-RC™ Remote Control Setup Wizard prepares your remote to test the activity with your home theater system.




3 Test the “Hello” activity with your devices.

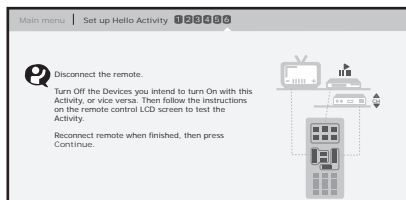

Once your remote is ready to test, the screen to the right appears.


Carefully disconnect the remote from your PC. The remote screens guide you through testing this activity.

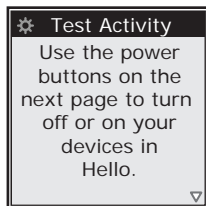


Read about the test

The first screen gives you some information about the test. Use the arrow keys below the screen to go to the next page.


IMPORTANT: Make sure all your devices are off before you start.



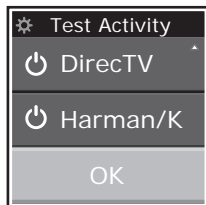


Test individual power commands


The second screen lets you test the power command you set for each device. Use the arrow keys to highlight each device, then press  for each device to see if it turns that device on. (If it does, make sure you turn it back off!) Only the first three devices are shown on this page. Use the arrow keys below the screen to access the rest of your devices.

IMPORTANT: If you notice one of your devices does not respond to the power command, make a note—you will need to change the power command you give to that device.

Under your last device, there's is an on-screen **OK** button. Highlight **OK** and press  to continue with the test.

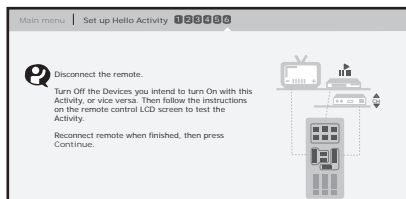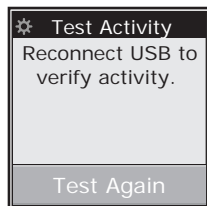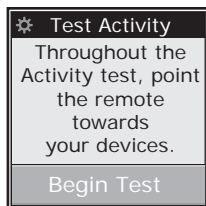


Test the entire activity

The next screen lets you test the “Hello” activity with your entire system. **IMPORTANT:** Make sure all your devices are off before you start. Also make sure your remote is pointed directly at your home theater. Then press  to begin the test. The screen says “Sending IR Functions” while the remote is sending the power commands.

Did it work?

If it worked (if your devices turned on): Reconnect the remote to your PC (see the heading below).

If it didn't work: Make sure your remote is pointed directly at your home entertainment devices and that there's nothing obstructing the path, then press  to test the activity again. **IMPORTANT:** Make sure all your devices are off before you start.

Try several times with the remote in different positions. If it still doesn't work, go ahead and reconnect to PC to troubleshoot and correct the activity.

Reconnect the remote to your PC

Once you've reconnected the remote, select **Continue** on the EZ-RC™ Remote Control Setup Wizard screen.


How do I know the remote's connected?



Look for the green arrow icon in your PC's status bar.

4 Finish up the activity.

If the activity worked with your remote, you're just a step from the finish. If the activity did not work as you thought it should, you can use the EZ-RC™ Remote Control Setup Wizard to make adjustments or troubleshoot.

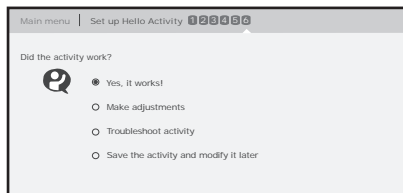

Select **Yes, it works!** if the activity worked.

Select **Make adjustments** if you know what needs to be changed (for example, if you noticed one of your devices didn't turn on).


Select **Troubleshoot activity** if you're not sure what needs to be changed.

Select **Save the activity and modify it later** if the activity didn't work as you wanted it to, but you would rather come back to it and troubleshoot or modify later.

Select **Next** when you've made your selection.

The final screen confirms that you've set up your first activity, Hello.

Click **Yes** to set up the next activity, "Good Night."

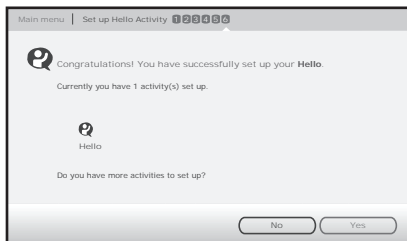

If you add devices later...


Don't forget to come back to your "Hello" activity and add their power commands as well to turn them on!

Need help setting up this remote?

Please call our help line toll-free at 1-800-276-0509.

Setting up the “Good Night” activity (all off)

1 Add a “Good Night” activity.

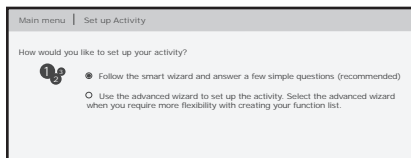

Choose Smart Wizard.

Then click the **Next** button to continue.

A screen appears showing you the steps you'll go through to set up the activity using the Smart Wizard. Click the **Next** button to continue.




If you're re-accessing the EZ-RC™ Remote Control Setup Wizard, go to the Main Menu and click **Activities**. A submenu appears next to the menu button. Select **Add an Activity**.

Then continue with the steps that follow to set up the “Good Night” activity.


Why Smart Wizard?

There are two ways to set up Activities: the Smart Wizard and the Advanced Wizard. The Smart Wizard is much easier for simple activities, like turning everything on or off. The Advanced Wizard is better for more complicated tasks.

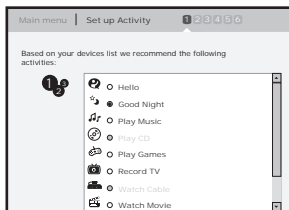

Choose the activity you want to set up (Good Night)


The next screen shows you a list of activities you can set up. Choose **Good Night**. Press the **Next** button to continue.

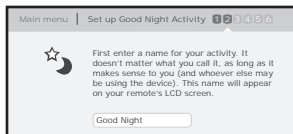

Name the activity

The next screen lets you customize the name of this activity. Type in a new name for this activity or leave it as “Good Night”. Then click **Next**.

2 Configure the “Good Night” activity for your devices.

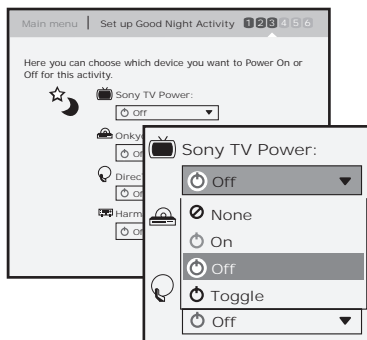

Set the power off commands

Once you’ve given the “Good Night” activity the name you want (or left it as “Good Night”), the next Wizard screen lets you set how each of your devices are powered off. Use the pull-down menu for each device to set that device’s power-off command. The options are:

None Use this option if you want to leave a device out of the “Good Night” activity (for example, if the device is in another room).

 
On Since this option turns your devices on, you won’t use it in this activity.

Off Use this option if the remote that originally came with this device has separate ON and OFF keys (not a single POWER key).


Toggle Use this option if the remote that originally came with this device has a single POWER (or ON/OFF) key.

Once you’ve set the power-off command for each of your devices click **Next** to continue.

After you click **Next**, the EZ-RC™ Remote Control Setup Wizard prepares your remote to test the activity with your home theater system.







3 Test the “Good Night” activity with your devices.

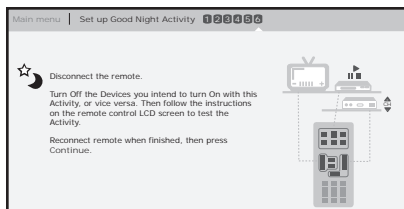

Once your remote is ready to test, the screen to the right appears.

Carefully disconnect the remote from your PC.

The remote screens guide you through testing this activity.

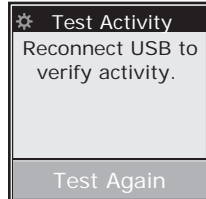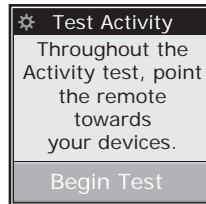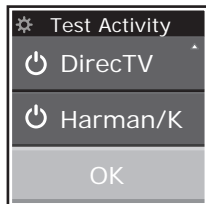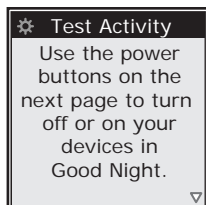


Read about the test


The first screen gives you some information about the test. Use the arrow keys below the screen to go to the next page.

IMPORTANT: Make sure all your devices are on before you start.

Test individual power commands


The second screen lets you test the power command you set for each device. Use the arrow keys to highlight each device, then press  for each device to see if it turns that device off. (If it does, make sure you turn it back on!) Only the first three devices are shown on this page. Use the arrow keys below the screen to access the rest of your devices.

IMPORTANT: If you notice one of your devices does not respond to the power command, make a note—you will need to change the power command you give to that device.

Under your last device, there's an on-screen **OK** button. Highlight **OK** and press  to continue with the test.


Test the entire activity

The next screen lets you test the “Good Night” activity with your entire system.

IMPORTANT: Make sure all your devices are on before you start. Also make sure your remote is pointed directly at your home theater. Then press  to begin the test. The screen says “Sending IR Functions” while the remote is sending the power commands.



Did it work?

If it worked (if your devices turned off): Reconnect the remote to your PC (see the heading below).

If it didn't work: Make sure your remote is pointed directly at your home entertainment devices and that there's nothing obstructing the path, then press  to test the activity again. **IMPORTANT:** Make sure all your devices are on before you start.



4 Finish up the activity.

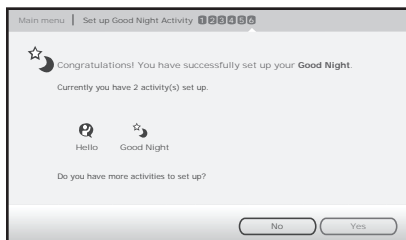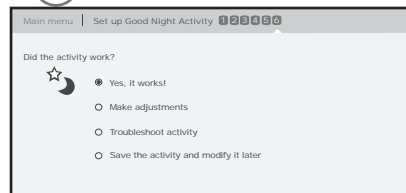

Try several times with the remote in different positions. If it still doesn't work, go ahead and reconnect to PC to troubleshoot and correct the activity.

Reconnect the remote to your PC

Once you've reconnected the remote, press **Continue** on the EZ-RC™ Remote Control Setup Wizard screen.

How do I know the remote's connected?



Look for the green arrow icon in your PC's status bar.

If the activity worked with your remote, you're just a step from the finish. If the activity did not work as you thought it should, you can use EZ-RC™ to make adjustments or troubleshoot.

Select **Yes, it works!** if the activity worked.

Select **Make adjustments** if you know what needs to be changed (for example, if you noticed one of your devices didn't turn off).

Select **Troubleshoot activity** if you're not sure what needs to be changed.

Select **Save the activity and modify it later** if the activity didn't work as you wanted it to, but you would rather come back to it and troubleshoot or modify later.

Press **Next** when you've made your selection.

The final screen confirms that you've set up your second activity, Good Night.

Click **Yes** to set up your next activity (like "Watch Movie" or "Watch Satellite/Cable").

If you add devices later...

Don't forget to come back to your "Good Night" activity and add their power commands as well to turn them off!

Setting up a “Watch Movie” activity

The next activities, “Watch Movie” and “Watch Satellite” (or “Watch Cable”), are different from the “Hello” and “Good Night” activities. For these activities, you will use the Advanced Wizard. The Advanced Wizard gives you more options to customize these activities to fit exactly the way your home theater is set up. But you should gather a little information about your devices before setting up the device in the EZ-RC™ Remote Control Setup Wizard.

1 Write down which devices you use to Watch Movies.

Look at the following example setup for “Watch Movie”, then fill in the information for this activity in your home theater.

Example setup	What device do you use to...		
	Control volume?	Watch video?	Control playback?
Watch Movie	A/V receiver	TV	DVD player

YOUR setup	What device do you use to...		
	Control volume?	Watch video?	Control playback?
Watch Movie			

2 Write down how you access those inputs with your original remotes.


Look at the following example setup for a “Watch Movie” activity. Then fill in the information for the activity in your home theater.

Example setup	Keypresses to watch/listen to a movie
A/V receiver	HDMI1 key
TV	INPUT, down arrow, ENTER


YOUR setup	Keypresses to watch/listen to a movie

IMPORTANT: If you always use the same input on any of your devices, you don't need to include this device in the “Watch Movie” activity—it should already be on the correct input.

3 Add a new activity in the EZ-RC™ Remote Control Setup Wizard.

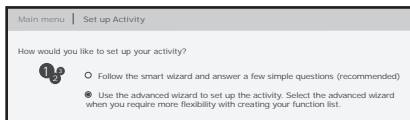

If you're re-accessing the EZ-RC™ Remote Control Setup Wizard, go to the Main Menu and click **Activities**. Select **Add an Activity** from the submenu that appears. Then continue with the steps that follow to set up the "Watch Movie" activity.

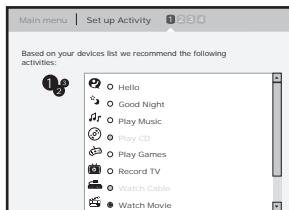

Choose Advanced Wizard

For the "Watch Movie" activity, choose the Advanced Wizard and click the **Next** button to continue.

A screen appears showing you the steps you'll go through to set up the activity using the Advanced Wizard. Click the **Next** button to continue.

Why Advanced Wizard?


The Advanced Wizard is better for Watch and Listen activities because it is more flexible, allowing for the wide variety of setups possible with today's advanced audio/video systems.

Choose the activity you want to set up (Watch Movie)


The next screen shows you a list of activities you can set up. Choose **Watch Movie**. Press the **Next** button to continue.

Name the activity



The next screen lets you customize the name of this activity. Type in a new name for this activity or leave it as "Watch Movie". Then click **Next**.

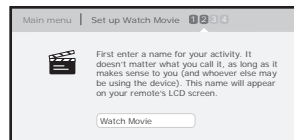


4 Build the "Watch Movie" activity for your devices.

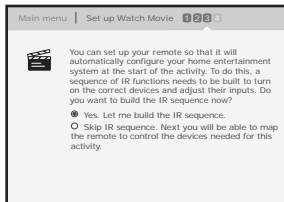

Once you've given the "Watch Movie" activity the name you want (or left it as "Watch Movie"), the next Wizard screen asks if you want to build the sequence of commands to configure your home entertainment system to watch a movie. Select **Yes. Let me build the IR sequence.** and click **Next**.

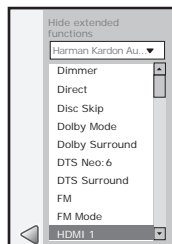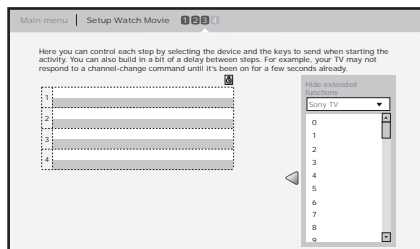

If you see this screen...

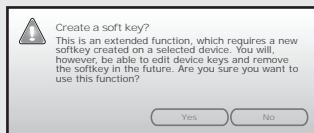

Don't worry—the *Xsight™ Uno* will create this soft key for you. Just click **Yes** and continue building your activity.

In the screen that follows, enter the series of keypresses you use to watch a movie on your entertainment system.

Use the chart for YOUR setup on page 23 to add the keypresses.

For “Watch Movie” you don’t need to turn anything on.

 
The “Hello” activity does that for you. All you need to worry about is finding the right input on your devices.

To enter each command into the sequence:

1. Use the pull-down menu on the right side of the screen to choose the device you want to send the command to.
2. Scroll through the commands available for this device. (The list also includes extended functions that the *Xsight™ Uno* will create if needed.) Find the key(s) that you want to enter for that device.
3. When you see the key command you want to use, highlight it and press the on-screen arrow button to include it in the list of commands for this activity.
4. Repeat for each key command you want to add to your activity.

To move a command in the sequence:

Click the command in the list. Then click one of the arrows that appear (up or down) to move the command.



To delete a command from the sequence: Click the **X** icon next to the icon in the sequence. Answer **Yes** to the dialog box that appears to delete the command from the sequence.

To change the timing between commands (sometimes useful if a device needs to respond to one command before it can respond to another): click the clock icon in the second line of the command and use the arrows to adjust the number of seconds to wait before giving the next command.

5. Once you've built the activity to your satisfaction, click **Next** to continue.

Don't see the key command you want?

First, make sure you've selected the correct device from the drop-down menu. Then, double check your original remote and make sure you've written down the key name correctly. If you still don't see the key command you're looking for, you can have the *Xsight™ Uno* learn this key from your original remote.

To learn a new key:

1. Click **Cancel** in the EZ-RC™ Remote Control Setup Wizard screen. Save the activity as you've built it so far.
2. Click **Download to Remote** in the Main Menu. Once the download has finished, disconnect the remote from your PC.
3. Follow the instructions for learning the key from the original remote on the *Xsight™ Uno*. These instructions are in the Owners Manual on the CD-Rom that came with your *Xsight™ Uno*.
4. Once you've finished learning the specific input key, reconnect the *Xsight™ Uno* to your PC and launch the EZ-RC™ Remote Control Setup Wizard again.
5. In the EZ-RC™ Remote Control Setup Wizard main menu, click **Activities** and choose **Modify Activity** from the submenu that appears.
6. Choose the **Watch Movie** activity, then **The Key Command Sequence**. Then follow the rest of the instructions starting on the previous page of this manual.



Set the volume/channel/transport controls

The final setup screen for the “Watch Movie” activity lets you set which devices you use to change volume and channels, and control playback when you're watching a movie.



To change which device a group of keys controls, click the device listed to display the drop-down menu and select the device you want this group of keys to control.

Once you've set the devices you want to control volume, channel selection, and playback, click **Next**.

The final screen confirms that you've set up a “Watch Movie” activity.

Click **Yes** to set up another activity.

Setting up a “Watch Satellite” or “Watch Cable” activity

① Write down which devices you use to “Watch Satellite/Cable”.

Look at the following example setup for “Watch Satellite”, then fill in the information for this activity in your home theater.

Example setup	What device do you use to...		
	Control volume?	Watch video?	Change channels?
Watch Satellite/Cable	A/V receiver	TV	Satellite rcvr

YOUR setup	What device do you use to...		
	Control volume?	Watch video?	Change channels?
Watch Satellite/Cable			

② Write down how you access those inputs with your original remotes.


Look at the following example setup for a “Watch Satellite” activity. Then fill in the information for the activity in your home theater.

Example setup	Keypresses to watch/listen to satellite/cable
A/V receiver	HDMI2 key
TV	INPUT, down arrow, ENTER

YOUR setup	Keypresses to watch/listen to satellite/cable

IMPORTANT: If you always use the same input on any of your devices, you don't need to include this device in the “Watch Satellite” or “Watch Cable” activity—it should already be on the correct input.


3 Add a new activity in the EZ-RC™ Remote Control Setup Wizard.

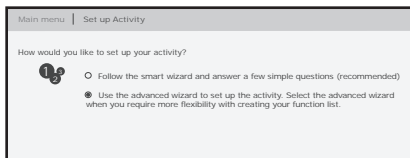

Choose Advanced Wizard

For the “Watch Satellite” or “Watch Cable” activity, choose the Advanced Wizard and click the **Next** button to continue.

A screen appears showing you the steps you’ll go through to set up the activity using the Advanced Wizard. Click the **Next** button to continue.

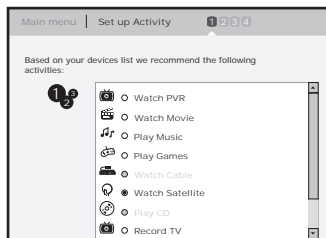

Choose the activity you want to set up (Watch Satellite or Watch Cable)


The next screen shows you a list of activities you can set up. Choose **Watch Satellite** or **Watch Cable**. Press the **Next** button to continue.

Name the activity




The next screen lets you customize the name of this activity. Type in a new name for this activity or leave it as “Watch Satellite” or “Watch Cable”. Then click **Next**.



4 Build the “Watch Satellite” or “Watch Cable” activity for your devices.

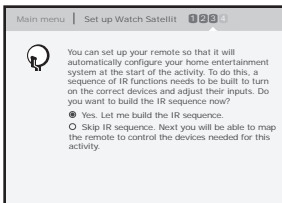

 Once you’ve given this activity the name you want (or left it as-is), the next Wizard screen asks if you want to build the sequence of commands to configure your home entertainment system to watch a movie. Select **Yes. Let me build the IR sequence.** and click **Next**.

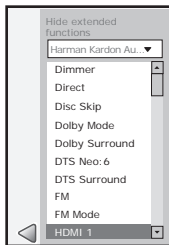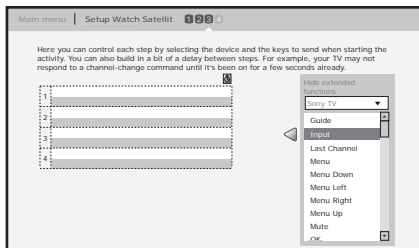

In the screen that follows, enter the series of keypresses you use to watch a movie on your entertainment system. Use the chart for **YOUR** setup on page 27 to add the keypresses.

For this activity, you don't need to turn anything on.

The "Hello" activity does that for you. All you need to worry about is finding the right input on your devices.

Don't see the key command you want?

See the "Don't see the key command you want?" box on page 26 for Troubleshooting suggestions.

To enter each command into the sequence:

1. Use the pull-down menu on the right side of the screen to choose the device you want to send the command to.
2. Scroll through the commands available for this device. (The list also includes extended functions that the *Xsight™ Uno* will create if needed.) Find the key(s) that you want to enter for that device.
3. When you see a key command you want to use, highlight it and press the on-screen arrow button to include it in the list of commands for this activity.



Create a soft key?
This is an extended function, which requires a new softkey created on a selected device. You will, however, be able to edit device keys and remove the softkey in the future. Are you sure you want to use this function?

Yes

No

If you see this screen...

Don't worry—the *Xsight™ Uno* will create this soft key for you. Just click **Yes** and continue building your activity.

4. Repeat for each key command you want to add to your activity.

To move a command in the sequence: Click the command in the list. Then click one of the arrows that appear (up or down) to move the command.

continues on next page...

To delete a command from the sequence: Click the **X** icon next to the icon in the sequence. Answer **Yes** to the dialog box that appears to delete the command from the sequence.

To change the timing between commands (sometimes useful if a device needs to respond to one command before it can respond to another): click the clock icon in the second line of the command and use the arrows to adjust the number of seconds to wait before giving the next command.

5. Once you've built the activity to your satisfaction, click **Next** to continue.


Set the volume/channel/transport controls

The final setup screen for the "Watch Satellite" or "Watch Cable" activity lets you set which devices you use to change volume and channels and control playback when you're watching satellite or cable.

To change which device a group of keys controls, click the device listed to display the drop-down menu and select the device you want this group of keys to control.

Once you've set the devices you want to control volume, channel selection, and playback, click **Next**.

The final screen confirms that you've set up this activity. Click **Yes** to set up another activity or **No** to go to the Main Menu.

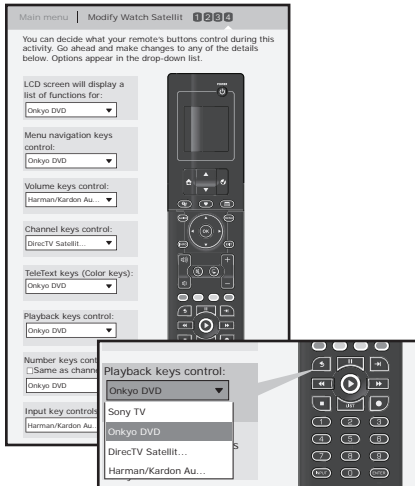

IMPORTANT: Don't forget to download your activities to your remote.

When you've finished customizing your remote using the EZ-RC™ Remote Control Setup Wizard, go to the main menu and click **Download to Remote** to save your settings to the remote itself.

The next screen asks if you'd like to review your settings.

Choose **Yes** if you want to see the complete list of activities, favorites, devices, and other settings you've saved using the EZ-RC™ Remote Control Setup Wizard. Choose **No** to download without reviewing the settings.


When all the information has been downloaded to your remote, a confirmation screen appears. Carefully disconnect the remote from your PC to start using it.

Using your activities

- ① Press the **1²3** (Activities) shortcut key.



- ② When you start using your home theater—before you turn anything on—choose the Hello activity.

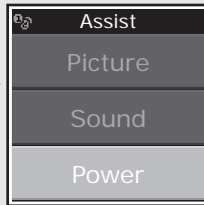

How do I know when an activity has finished?

When you see the **Assist** and soft keys for one of your devices on the remote screen, the remote has finished sending the activity's commands and is ready to do something else.



Need help after the "Hello" activity has finished?

Select **Assist**. Then select **Power** to turn devices on manually. Use the arrow keys below the screen to access more devices.



- ③ Choose the home entertainment activity you want to perform (for example, Watch Movie).

Need help after a Watch.. or Listen... activity has finished?

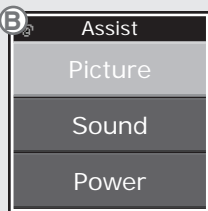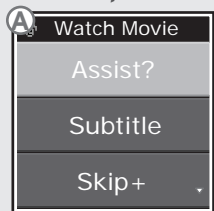

A Select **Assist**.

B Select **Picture** or **Sound**.


C Press the [key] key for the input displayed until you see or hear the correct signal.

Press the [key] key when you see or hear the source you want. Then press the [key] key again to go to the soft keys. To go to the home menu, press and hold the [key] key.

What if Assist doesn't work?

If the **Assist** screens are not helping you find the correct inputs on your devices, check the following:

- **Is the wrong device changing inputs?**

Make sure the input key you see on the Sound/Picture screen is the correct one for the device you're trying to change. If it isn't, press the  key and try the other Assist option (for example, **Sound** if you chose **Picture** first)


If that option is still changing inputs on the wrong device, connect the remote to your PC and launch the EZ-RC™ Remote Control Setup Wizard. In the main menu, choose **Activities, Modify an Activity**, the activity you want to modify, and **Key Command Sequence**. In the Key Command Sequence, check that you've chosen the correct input commands for each device.

- **Is the device going to the wrong input or not changing inputs at all?**

Make sure the input key you see on the No Sound/No Picture screen matches the device input you're trying to access. If it doesn't, you'll need to change to the correct command in the EZ-RC™ Remote Control Setup Wizard.

Connect the remote to your PC and launch the EZ-RC™ Remote Control Setup Wizard. In the main menu, choose **Activities, Modify an Activity**, the activity you want to modify, and **Key Command Sequence**. In the Key Command Sequence, check that you've chosen the correct input commands for each device.

To do another activity: Press the  shortcut key.

To go to the home menu: Press and hold the  key.

Good Night

4

When you're finished with your home theater, press the  shortcut key and choose the **Good Night** activity.

Need help setting up this remote?

Please call our help line toll-free at 1-800-276-0509.

Favorites

Quick Look:

> Create your Favorite Channels list


What you'll be doing by the end of this section:

Using the *Xsight™ Uno* your way, all at the touch of a button.

Creating your Favorite Channels list

Favorites lets you set your Favorite Channels (up to 6) and preferred settings for channel surfing.

1 Set up your favorites.

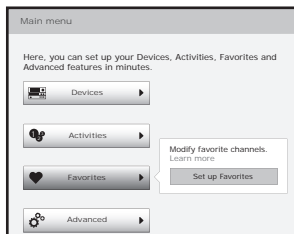


In the main menu, click **Favorites** and select **Set up Favorites** from the Favorites submenu.

The next screen shows you the steps you'll complete to set up your favorites. Press **Next** to continue.

If you're not already signed in:

1. Double-click the EZ-RC™ Remote Control Setup Wizard icon on your PC desktop and sign in.
2. Connect your remote and click **Continue**.
3. Select **Edit an existing setup you've saved here before** and click **Start**. (If you've made changes on your remote, press **Upload and edit...**) Continue with the rest of the directions in this section.

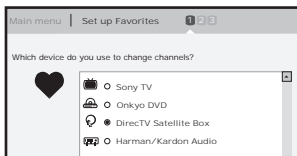

Set the device you use to change channels

If you subscribe to a satellite programming service, for example, you probably use your satellite box to change channels, not your TV. Choose the option that works for your home theater, then click **Next**.

Note: The Favorites feature works with a single source, like your cable box or satellite receiver. It will not work with a second source (for example, a satellite receiver *and* over-the-air programming on your TV).



Set how many digits your channels have

For example, if your channels go up to 999, then you should select 3 digits. If the channels go up to 99, you should select 2 digits. Choose the option that works for your home theater, then click **Next**.

Note: If you plan to include digital sub-channels in your Favorites list (like 59.1), choose **4 digits**. Then choose **Enter** or **Select/OK** in the screen that follows if your system supports either of these options.




Set how you finish entering a channel number

Next you tell the setup wizard if you usually press Enter or OK on your remote to enter a channel. Choose the option that works for your home theater, then click **Next**.

Now the EZ-RC™ Remote Control Setup Wizard starts loading the channel icons. This might take a few minutes, depending on the speed of your internet connection.

2 Choose your favorite channels.

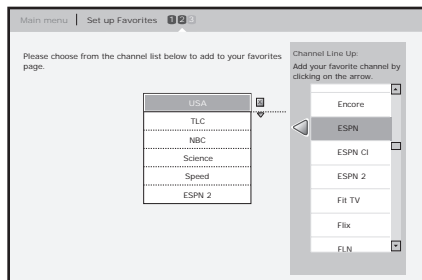


Select a channel

Click the scroll bar to find a channel you want to add to your favorites. The channels are listed in alphabetical order. Highlight a channel you want to add, and click the arrow that appears to the left of the channel to add it to your favorites.

If you don't see your channel listed...

 Channel Line Up:
Add your favorite channel by
clicking on the arrow.




You can add it manually by choosing **Other** at the top of the list.


Current Favorite: 
Channel Name:
USA

Then type in the text you want to use and proceed to the rest of the directions that follow to enter the channel number.

Main menu | Set up Favorites 1 2 3

Please choose from the channel list below to add to your favorites page.

Current Favorite: 
Channel Name:
USA
Channel Number:
208
Refresh Channel Remove Favorite Channel

USA	
-----	-----------------------------------------------------------------------------------

Type in the channel number


When the channel label appears in the list of favorite channels, type in the number for the channel in your programming.

Add the next channel


 
Click the space below the channel you just added to add another channel to your favorites. Then follow the same procedure you followed for adding the first channel.

Main menu | Set up Favorites 1 2 3


Please choose from the channel list below to add to your favorites page.

Current Favorite: 
Channel Name:
Science
Channel Number:

Refresh Channel Remove Favorite Channel

USA	
TLC	
NBC	
Science	
Speed	
ESPN 2	

Check your channels

When you've added all your favorite channels, check the list to make sure you've added channel numbers for all the channels—otherwise the remote won't be able to tune directly to this channel. A  icon appears next to those channels missing channel numbers.


To move a channel in the list, click on the channel's label, then click one of the arrows that appear to change the channel's position on the screen. To delete a channel from the favorites list, click on the **X** icon.

Finish the list

When you've made sure all the channel numbers are entered, click the **Next** button to proceed to the final step of creating your Favorites list. The setup wizard takes a few moments to prepare the next screen.

Speed
ESPN 2

3 Choose the devices controlled by each section of the remote.

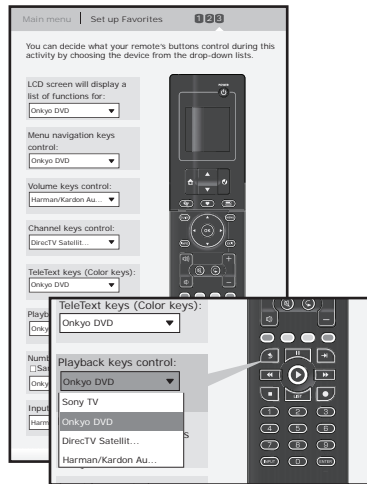

In the final step in creating your Favorite channels list, you set what different groups of keys control by default when you're using your favorite channel list.

Set this screen for the way you usually use a remote while watching your favorite channels. Once you've set up the keys on this screen, you won't need to switch device modes to control the volume, channels, etc.—no matter which device you're controlling with the other keys, the remote will automatically change volume on the device you select here.

You can set the following options:

LCD screen (soft keys)

Menu navigation keys

Volume keys

Channel keys

TeleText (color) keys

Playback keys

Number keys


Input keys

To change an option from the one shown, highlight the option you'd like to change, then choose the device you want these keys to control from the drop-down list.

When you've finished setting the device you'd like the keys in each section of the remote to control, click the **Next** button to proceed.

That's it! You've set up your list of Favorite channels.

Click **Next** to go to the main menu.

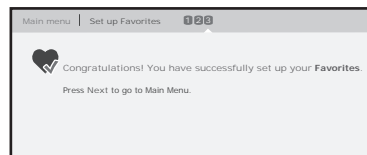

Troubleshooting

Most common problems with your *Xsight™ Uno* can be resolved by trying one of the following solutions. If you have any further questions, please call our help line toll-free at 1-800-276-0509.


Initial setup

- **The screens are in the wrong language.**

Change the setting by pressing the  (Home/Back) key to go back one or more screens in the setup routine.

- **How can I reset my remote?**

You can reset the remote to its settings when you first unpacked it. This removes all information about your devices, activities, and other setup parameters.

1. Press the  (Home/Back) key on the remote to go to the Home screen.
2. Use the down arrow key to access the second page of the Home screen. Select Settings.
3. Use the arrow keys to go through the pages of the Settings menu until you see the Reset option. Select Reset. The remote will display the Reset Screen.
4. Press the 9 - 8 - 1 number keys.
5. Select Factory Reset.
6. Select Yes in the confirmation screen to delete all device programming, activities, profiles and favorites, and setup information (the remote's initial setup program will start). Select No to cancel the reset and retain all settings.

On-remote device setup

- **How do I access on-remote device setup?**

If you quit setup before reaching on-remote device setup, you can access device setup through the Setup menu on the remote. In the Home screen, choose **Settings** (it's on the second page of the Home screen—use the arrow keys below the screen to access it). Then select **Device Setup** and **Add Device**. Then follow the rest of the instructions in the Out of the box section.

- **I don't see my device in the "What is it" screen.**

Try the EZ-RC™ Remote Control Setup Wizard. On-remote device setup supports the most popular models of the most popular brands. The EZ-RC™ Remote Control Setup Wizard handles everything else. See the sections on the EZ-RC™ Remote Control Setup Wizard for information.

- **I don't see my brand in the "Brand" screen.**

Try the EZ-RC™ Remote Control Setup Wizard. On-remote device setup supports the most popular models of the most popular brands. The EZ-RC™ Remote Control Setup Wizard handles everything else. See the sections on the EZ-RC™ Remote Control Setup Wizard for information.

- **I can't find a code that works my device (or one that does everything I want it to do).**


Make sure you're pointing the remote directly at the device you're trying to control and that there's nothing obstructing the path.

It may take a few seconds for your device to respond to a command (especially on or off). Be patient between presses—give your device a few seconds to respond.

Some brands of devices do not use a POWER key to turn the device on or off. Instead they use separate POWER ON and POWER OFF keys. Check your devices' original remotes to see if any of them have these separate power keys. If they do, use other keys (volume, channel, or number keys) to test codes in this step.

If the above solutions don't work completely, use the EZ-RC™ Remote Control Setup Wizard. The setup wizard lets you enter your device's model number to find exactly the right code for your device. If you find a code that does most of what you want to do with a device, you can learn additional keys from your original remote through the remote's Settings menu (see the remote's user manual for instructions).

- **How can I go back if I make a mistake?**

Press the  (Home/Back) key to go back one or more screens in the setup routine.

The EZ-RC™ Remote Control Setup Wizard

- **The EZ-RC™ program won't install on my PC.**

Your PC must be running Windows XP, Windows Vista, or Windows 7 (Windows 2000 is not supported). You must use Internet Explorer 6.0 or later (Firefox or Safari not supported).

Windows XP users must have Service Pack 3 and .Net 3.5

To find out which service pack version you have:

1. Right click on My Computer on your PC desktop.
2. Choose Properties from the drop-down menu.
3. In the General Tab, the Service Pack is listed under System.

To update to SP3:

1. Insert the CD that came with the remote. The CD goes automatically to Microsoft update site if you have a working internet connection.
2. At the Microsoft website, click Express to begin the updating process. The Microsoft site checks your computer (this takes about 5-10 minutes).
3. The Microsoft site will tell you which updates you need to install. Follow the Microsoft site and installation wizard instructions to download and install updates.
If you have SP1, this will take 1 hour to update to SP2; an additional 30 mins for SP3 (depending on connection speed)
If you have SP2, this will take 30 mins for SP3 (depending on connection speed)
4. Close all internet browser windows and continue with EZ-RC install.

- **What if my CD doesn't start installation automatically?**

Open the CD and double-click on the EZ-RC™ icon.

If you have Windows XP and need Service Pack 3, see "To update to SP3" above (Vista users do not need this kind of update).

- **The EZ-RC™ program seems slow.**

Proxy servers, like those used in many business networks, may affect the performance of the EZ-RC™ Remote Control Setup Wizard. For best results, use the EZ-RC™ Remote Control Setup Wizard with a direct internet connection (for example, your home connection).

- **How do I know the remote's connected?**

Look for the green arrow icon in your PC's status bar.

- **I see a progress bar in the corner of the screen when I connect the remote.**

Your remote's firmware is being updated. Don't disconnect the remote! The

Xsight™ Uno is constantly being updated and improved, to get the latest codes and provide the most advanced functionality available.

- **I get an error message after I connect my remote.**

You might need to change your ActiveX settings in Internet Explorer for the EZ-RC™ Remote Control Setup Wizard to work.

To change ActiveX settings:

1. Click OK in the "Missing necessary software..." dialog box.
2. Locate the yellow warning bar just above the AR remote control setup wizard page.
3. Click where it says "click here" on the yellow warning bar to change the ActiveX setting.
4. Click the Connect button again at the bottom of the screen.

- **The batteries run out when I leave the remote connected to the PC.**

Leaving the *Xsight™ Uno* connected to your PC will drain the remote's battery. Always disconnect the remote from your PC when you're finished.

Setting Up Activities

- **I want to add a key command to my "Watch Movie/Satellite/Cable" activity, but I don't see it in the list of commands.**

Make sure you've selected the correct device from the drop-down menu.

Double check your original remote and make sure you've written down the key name correctly.

If you haven't entered model number information for this device in the EZ-RC™ Remote Control Setup Wizard, go to the Main menu, select **Devices** and **Modify Device**. Then enter the model number for this device to get all the functionality available.

If you still don't see the key command you're looking for, you can have the *Xsight™ Uno* learn this key from your original remote. See page 26 for more information.

- **I've set up Activities on my PC, but I can't access them on my remote.**

You must download any changes you've made to your settings in the EZ-RC™ Remote Control Setup Wizard to the remote. Go to the main menu and click **Download to Remote** to save your settings to the remote itself. Otherwise, the work you've done will not be saved to your remote. See page 30 for more information.

Using Activities

- **How do I know when an activity has finished?**

When you see the **Assist** key and soft keys for one of your devices on the remote screen, the remote has finished sending the activity's commands and is ready to do something else.

- **My "Hello" activity didn't work.**

On the remote screen, select **Assist**. Then select **Power**. Select the key for each device to turn that device on. Use the arrow keys below the screen to access more devices.

Make sure your remote is pointed directly at your home entertainment devices and that there's nothing obstructing the path.


If the Power On/Off command in the Assist screen still doesn't turn your device on, you might be using the wrong command to power on this device. Reconnect to the EZ-RC™ Remote Control Setup Wizard and choose **Activities, Modify Activity**. Then choose the **Hello** activity and check the power on/off commands. See page 32 for more information.

Make sure all your devices are off before you start the "Hello" activity.

- **My "Watch Movie/Satellite/Cable" activity didn't work.**

On the remote screen, select **Assist**. Then select **Sound** or **Picture**. Finally, select the on-screen input button until you see or hear the correct signal.

- **The wrong device is changing inputs in the Assist screens.**

Make sure the input key you see on the Sound/Picture screen is the correct one for the device you're trying to change. If it isn't, press the  key and try the other Assist option (for example, **Sound** if you chose **Picture** first)

If that option is still changing inputs on the wrong device, connect the remote to your PC and launch the EZ-RC™ Remote Control Setup Wizard. In the main menu, choose **Activities, Modify an Activity**, the activity you want to modify, and **Key Command Sequence**. In the Key Command Sequence, check that you've chosen the correct input commands for each device.

- **The device is going to the wrong input or not changing inputs at all in the Assist screens.**

Make sure the input key you see on the Sound/Picture screen matches the device input you're trying to access. If it doesn't, you'll need to change to the correct command in the EZ-RC™ Remote Control Setup Wizard.

Connect the remote to your PC and launch the EZ-RC™ Remote Control Setup Wizard. In the main menu, choose **Activities, Modify an Activity**, the activity

you want to modify, and **Key Command Sequence**. In the Key Command Sequence, check that you've chosen the correct input commands for each device.

Using Favorites

- **I can't find a channel I want to add to my Favorites.**

You can add it manually by choosing **Other** at the top of the list. Continue with the instructions that follow to add the channel number for this channel.

- **I can't tune to one or more of my favorite channels.**

Make sure all your favorite channels are on a single source, like your cable box or satellite receiver. Favorites won't work with a second source (for example, a satellite receiver and over-the-air programming on your TV).

If you have digital sub-channels in your Favorites list (like 59.1), choose **4 digits** in the Favorites setup. See page 34 for more information.

Make sure the settings for Favorites match the way you tune to channels in your system. See page 33 for more information.

Make sure the channel numbers you entered for your favorite channels are accurate for your system.

Need help setting up this remote?
Please call our help line toll-free at 1-800-276-0509.

Use of the software provided with this product may require the most recent Windows® updates in order to function properly. Any such updates are third party software which shall be governed by such third party's license agreement. Audiovox is not responsible for any third party's software and shall have no liability for your use of third party software.

©2010 Audiovox Accessories Corporation

Xsight™ and EZ-RC™ are trademarks or registered trademarks of Universal Electronics Inc. Windows® is a registered trademark of Microsoft Corporation. All trademarks are the properties of their respective owners.

ARRX06G NA Setup 00